

The Translation Subdialog

This section describes the translation subdialog that is used in several objects.


The application shell enables the creation of multilingual applications in which up to nine languages are supported. Not only can the dialogs and error messages be translated, but also the entire command syntax. In addition, text boxes (e.g., Name and DIL text) can be translated.

Using the Translate subdialog, you can only translate into a language which is not currently active.

► To translate text into another language

1. Choose the Translate button.

The Translate dialog appears. The top group box contains the Name/DIL text for the source language. In the lower group box you translate the Name/DIL text into the target language.

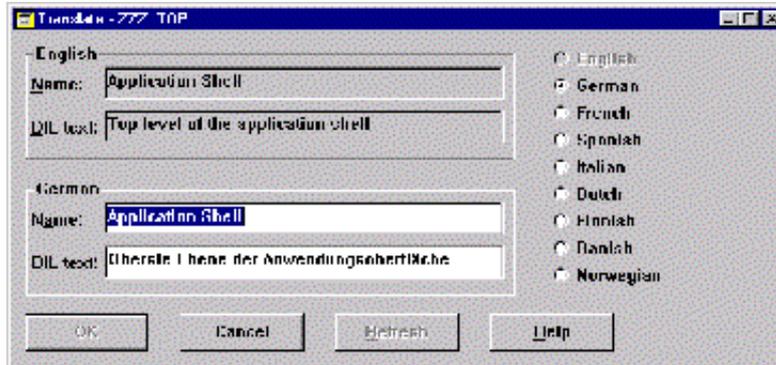

2. Select the option button applicable to the target language.
3. In the Name text box, enter the translation for the Name text box.
4. In the "DIL text" text box, enter the translation for the "DIL text" text box.
5. Choose the OK button.